TOSHIBA

Simple at-a-glance reference of your remote control

To display teletext

To bring up on-screen information and for the teletext initial/index function

For On/Standby mode

Number buttons

To select input from external sources
To access sub-pages when in teletext mode

To return to the previous programme

Selectable picture preferences

Widescreen viewing

On-screen Menus

To exit Menus

To change programme positions and teletext pages
To alter the volume
When using menus the arrows move the cursor on the screen up, down, left or right. **OK** *to confirm your selection*

Teletext control buttons

No function on this model

To select mode

Bass Boost/Super woofer

To mute the sound

When using a TOSHIBA VCR or DVD:
press ⏸ to PAUSE
press ⏏ to EJECT
press ⏮ to SKIP-REWIND
press ⏭ to SKIP-FORWARD
press ▶ to PLAY
press ■ to STOP
press ◀◀ to REWIND
press ▶▶ to FAST FORWARD

When in TV mode:
▼ *Still Picture*
I/II *Stereo/bilingual reception*
/ *Time display*
When in Teletext mode:
To reveal concealed text
To hold a wanted page
To enlarge teletext display size
/ *To select a page whilst viewing a normal picture*

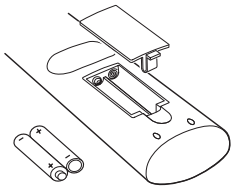

Remove the back cover to insert the batteries, make sure they are inserted the right way round.

Suitable battery types for this remote are:
UM-4, AAA, IEC R03 1.5V.

Printed on recycled paper.
100% Chlorine free.

Quick Set Up Guide and Remote Control

TOSHIBA

Auto Tune – WH46 Series

1. Plug the aerial directly into the AERIAL INPUT on the television set.

2. Connect the television to the mains. If the power-on light is unlit press the **ON/OFF** button on the front of the set.

3. Press **button 1** on the remote control.

4. Press the **MENU** button, and use ❮ or ❯ button to select **SET UP** from the top bar.

5. Press the ❯ button to highlight **Auto tuning**.

6. Then the ❯ button to select the **Auto tuning** screen.

You will be informed that all previous settings will be lost.

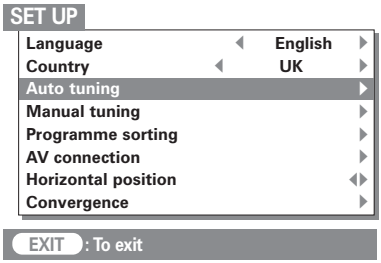

7. Press the **OK** button to begin the search for available signals.

8. ▸▸▸ will flash and the bullet will move along the line as the search progresses.

You must allow the television to complete the search.

When the search is complete the TV will automatically return to programme position 1.

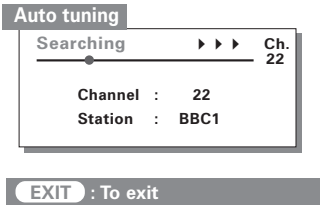

Auto tuning is now complete. To select programmes press the number buttons.

In some areas of the UK duplicate TV stations are received, if the Autosort has put these in adjacent numbers e.g. BBC1 in positions 1 and 2, simply re-order using the Programme Sorting feature. For details of this and further operations plus equipment connections please refer to the TV Owner's Manual.